

# EX6 Touch Panel (CT)



EX6



F6



Receiver

Manual

[www.ltechonline.com](http://www.ltechonline.com)

## Technical Specs

### EX6 Color Temperature Touch Panel (4 zones)

Input Voltage:	100~240Vac	Dimensions:	L86×W86×H37(mm)
Output Signal:	RF 2.4GHz, DMX512	Package Size:	L113×W112×H50(mm)
Working Temp.:	-30°C~55°C	Weight(G.W.):	225g

### F4-3A CV Receiver

Input Voltage:	5~24Vdc	Working Temp.:	-30°C~55°C
Max Current Load:	3A × 4CH Max. 12A	Dimensions:	L125×W33×H20(mm)
Max Output Power:	60W/144W/288W(5V/12V/24V)	Package Size:	L127×W35×H24(mm)
Wireless Signal:	2.4GHz	Weight(G.W.):	60g

### F4-5A CV Receiver

Input Voltage:	5~24Vdc	Working Temp.:	-30°C~55°C
Max Current Load:	5A × 4CH Max. 20A	Dimensions:	L175×W44×H30(mm)
Max Output Power:	100W/240W/480W(5V/12V/24V)	Package Size:	L178×W48×H33(mm)
Wireless Signal:	2.4GHz	Weight(G.W.):	150g

### F4-CC CC Receiver



Input Voltage:	12~48Vdc	Working Temp.:	-30°C~55°C
Output Voltage:	3~46Vdc	Dimensions:	L175×W44×H30(mm)
Output Current:	CC 350/700/1050mA×4CH	Package Size:	L178×W48×H33(mm)
Output Power:	1.05W~48.3W×4CH Max 193.2W	Weight(G.W.):	165g
Wireless Signal:	2.4GHz		

Note: Receiver is sold separately.




Product Size:

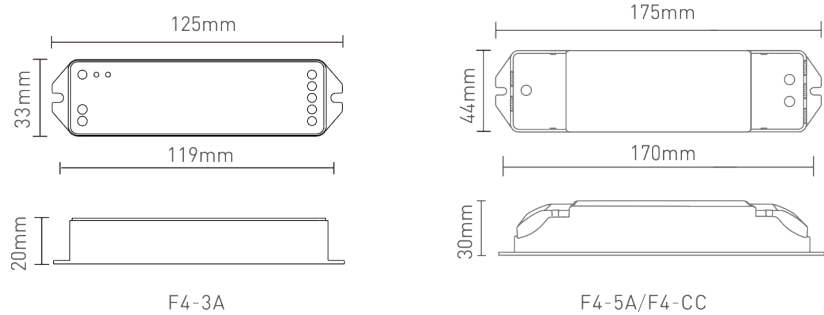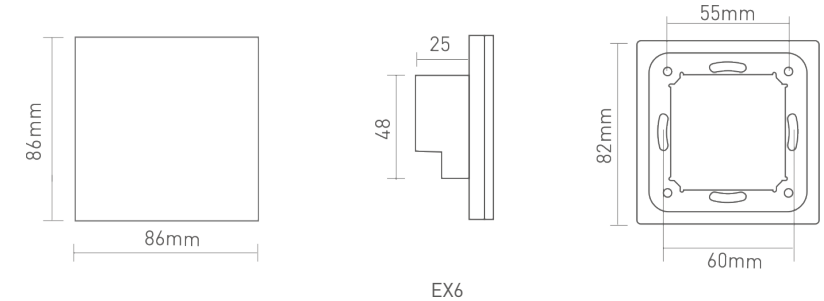

LTECH




Key Functions:

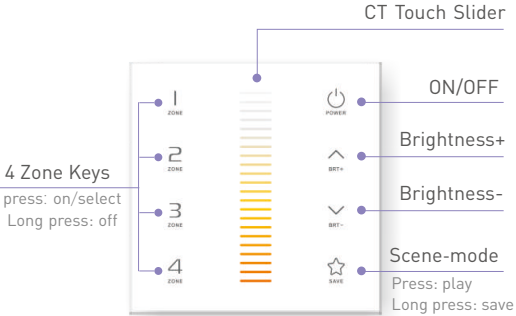LTECH




\* When the touch panel is off, Long press  to turn on/off the buzzer  
When the touch panel is on, Long press  to match code.

Terminals:

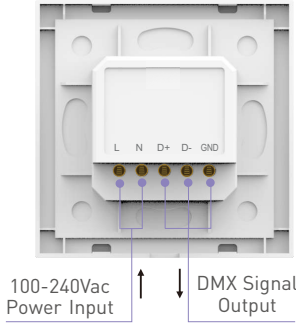


## Installation Instruction:

LTECH

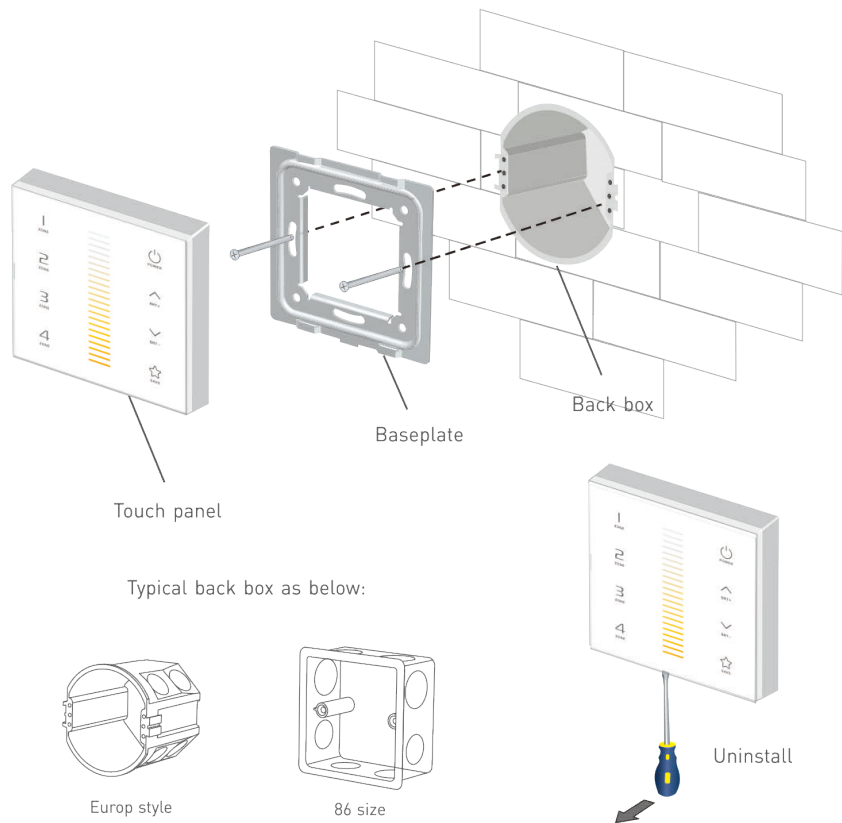


## DMX Wiring:

LTECH

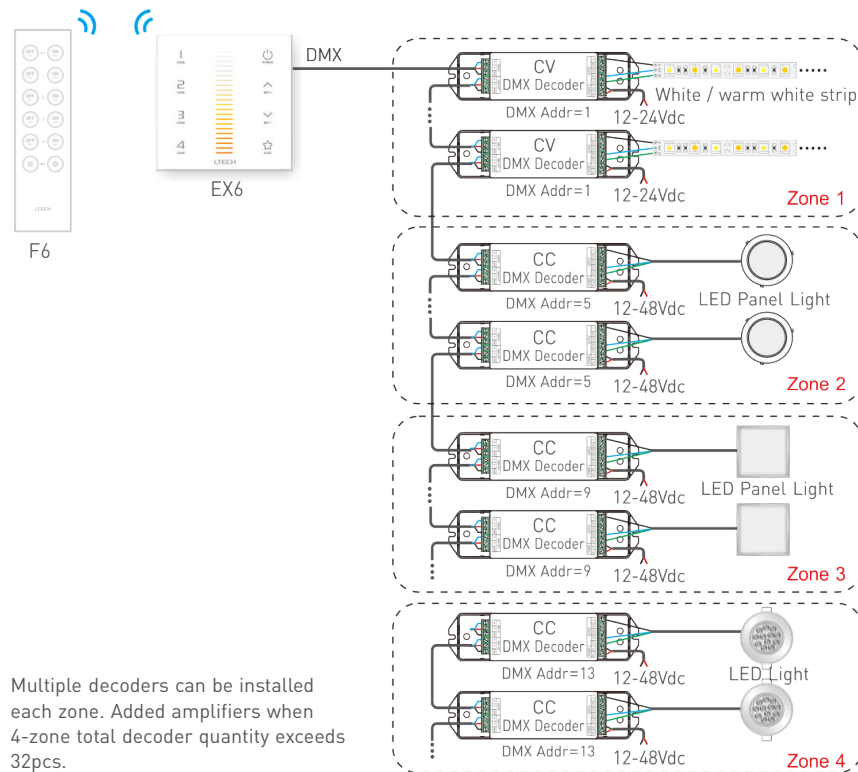

## RF Wireless Wiring:


LTECH

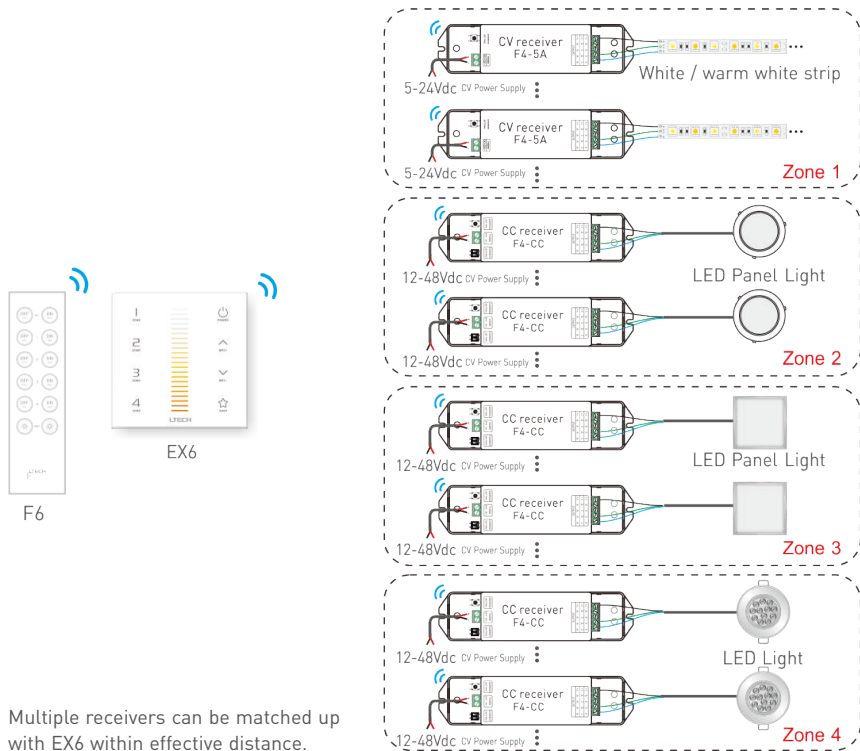

Multiple receivers can be matched up with EX6 within effective distance.

## Multi-control Wiring:

LTECH

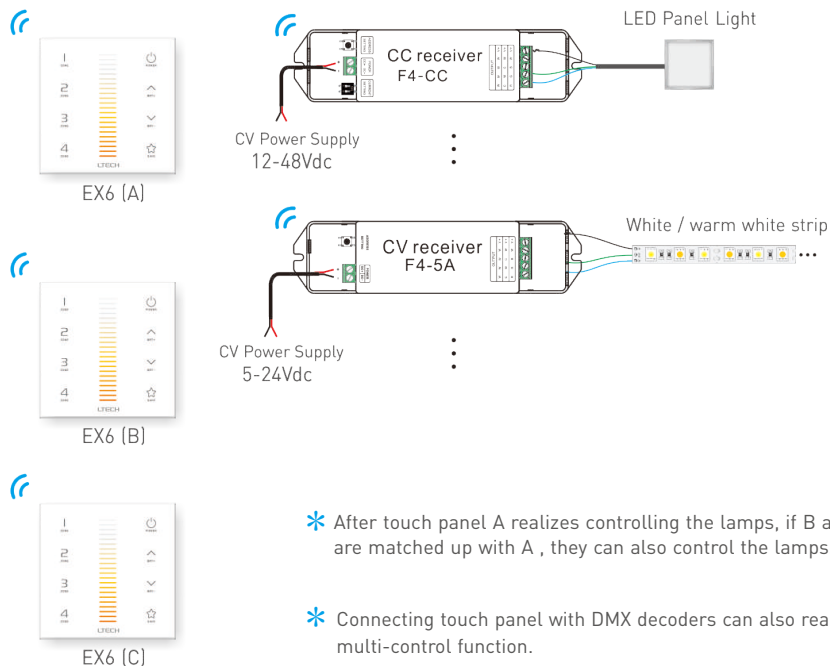

\* After touch panel A realizes controlling the lamps, if B and C are matched up with A, they can also control the lamps.

\* Connecting touch panel with DMX decoders can also realize multi-control function.

## Match/Clear Code between Touch Panel & Receiver

LTECH

### Match code:

Method 1 : When the touch panel is on and the wiring between the receiver and the lamps are correctly,

1.



Power on the receiver, and complete step 2 within 10s.

2.



Long press on the touch panel, the lamps flicker.


3.



Touch the matching zone key on the touch panel, the lamps stop flicking, match successfully.

Method 2 : When the touch panel is on and the wiring between the receiver and the lamps are correctly,

 1.




Short press "ID learning button" on the receiver.

2.



Long press on the touch panel, the lamps flicker.

 3.




Touch the matching zone key on the touch panel, the lamps stop flicking, match successfully.

### Clear code:

Method 1: Power on and off the receiver continuously for 5 times, If the buzzer long beep and lamps flicker twice, deactivate the matching successfully.



 Method 2: Long press "ID learning button" on receiver for 5 seconds, If the lamps flicker twice, deactivate the matching successfully.



## Match/Clear Code between Remotes:

LTECH

### Match code:

1.



Assuming that B match up with A.

2.



Long press on B, the indicator lights of 4 zone keys keep on after release.

3.



Touch the slider on A in 5s, when the indicator lights of B turn off, match successfully.

### Clear code:



Long press the two keys on the touch panel B simultaneously (about 3 seconds) until the indicator light flicker several times, deactivate the matching successfully.

## Match/Clear Code between Touch Panel & Remote:

### Match code:

1.



 
Long press on the touch panel, the indicator light of the 4 zone keys flicker.

2.



Long press ALL "ON""OFF" key on the remote simultaneously, the indicator light stop flicking, match successfully.

### Clear code:



Long press the two keys on the touch panel simultaneously (about 3 second), if the indicator light flicker 3 times, deactivate.